


Assembly & Use Instructions

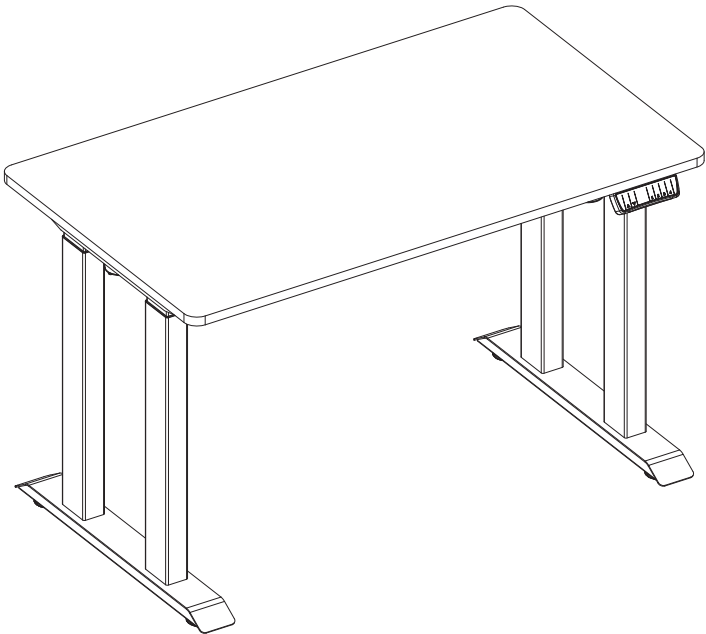

Caution / Information



Make sure no obstacles are in the desk's path. Make sure the desktop is not touching any walls. Make sure all cords are appropriate length to accommodate the change in height.

WARNING
Pinch Point
Keep hands and fingers clear

Keep children away from electric height-adjustable desks, control units and handsets. There is a risk of injury and electric shock

Keep all electrical components away from liquids.

Do not sit or stand on the desk frame. Do not crawl or lie under the desk frame.

Do not place any objects taller than 20" underneath the desk.

Do not open any of the components ---the Legs, Control Box, or Switch. There is a danger of electric shock.

This product is designed with a duty cycle of 10%. (2 min. on, 18 min. off)

In the event of a power outage or if the power cord is unplugged, a manual reset may be necessary--see Step 11.

Use/Liability

This height adjustable desk has electric motors and is designed for use in dry work areas only.

The desk height is adjustable so that it can be positioned at the most ergonomically suitable height.

Any other use is at user's risk.

Under no circumstances does the manufacturer accept warranty claims or liability claims for damage caused from improper use or handling of the desk frame.

Important:
Please read this manual carefully, if this desk is sold, please provide this manual to the buyer.

Thanks for your attention!

Technical Specifications

Height Range	720MM-1270MM (without desktop)
Base Width	1000-1600MM
Travel Speed	20 per second (no load)
Weight Capacity	Max. 200 kg
Duty cycle	10%. Max. 2 mins on, 18 mins off
	Soft start/stop
	Adjustable leveling studs
	3 Memory presets


Parts

Tools required

4mm Allen Wrench (Included)
5mm Allen Wrench (Included)

Phillips Head Screwdriver and/or Power Drill
Tape Measure


Components

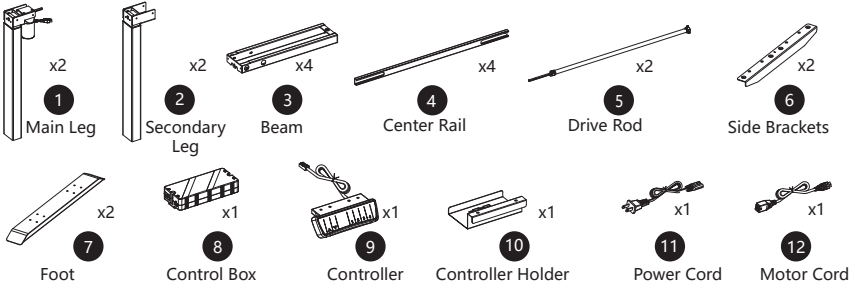

Hardware

A x32 Machine Screws M6x8
B x16 Machine Screws M6x16
C x8 Machine Screws M6x40
D x12 Wood Screws M5x16
E x2 Wood Screws M4x20
F x4 Glides


Hardware

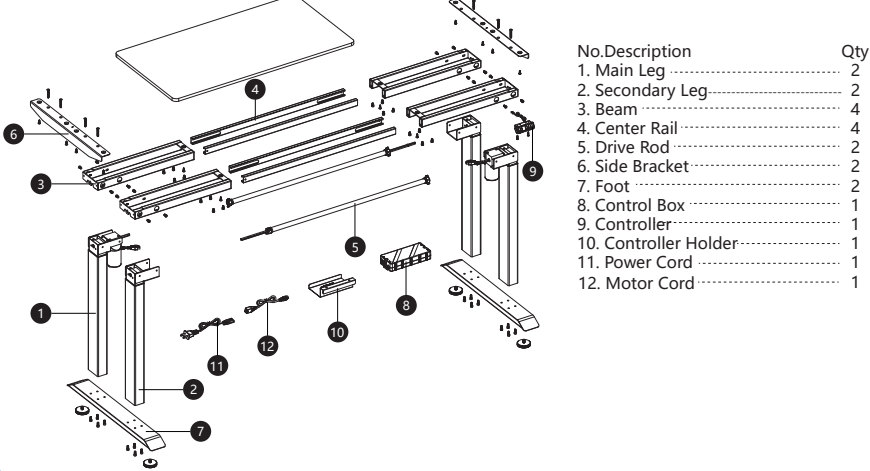

Assembly Instructions


1.

Take out two Beams(3), one of the main legs (1) and one of the secondary legs (2), as shown in the picture .

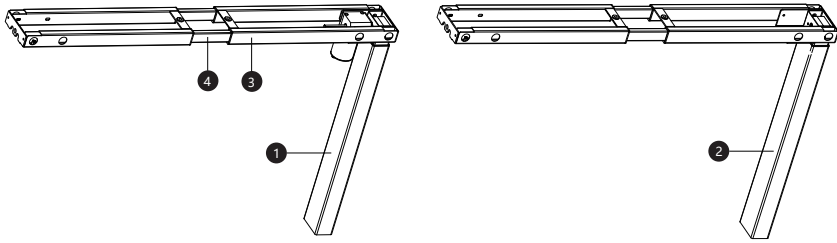


2.

Install these two legs(1 and 2) onto the two Beams(3) with M6X8 Screws A (4 M6X8 screws are needed for each leg). (Please note that when installing, you may need to pull the internal tube strips to ensure that the screw holes on the brackets can be seen.) Keep these two Beams on the same side.

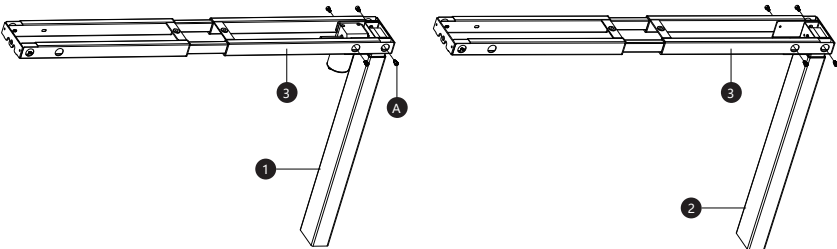

3.

Take a Side Bracket(6) and use M6X40 black screws C to install the Side Bracket together with these two sets of legs (as shown in the picture). Please do not fully tighten the screws of the M6X40.

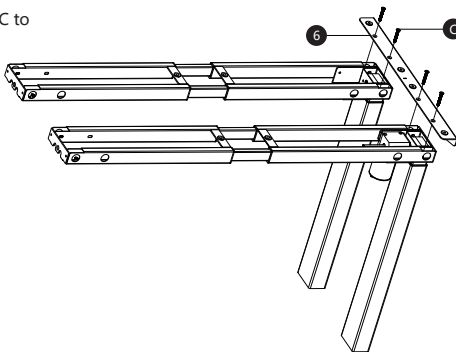


page 4

Assembly Instruction

4.


Take out the other two legs and install them on the other side of the Beam. Please make sure that there is only one main leg with a motor on each side, and the final two main legs with motors are in diagonal positions.

Install the remaining set of Side Bracket(6), and tighten all 8 M6X40 screws.

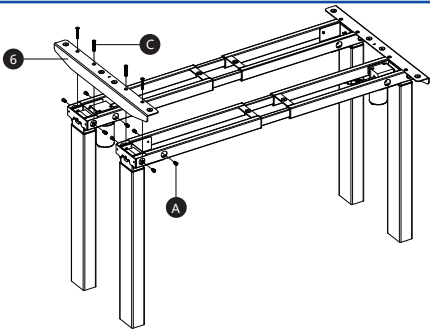


5.

Put the Drive Rod(5) into the motor and fastern as shown in the figure.

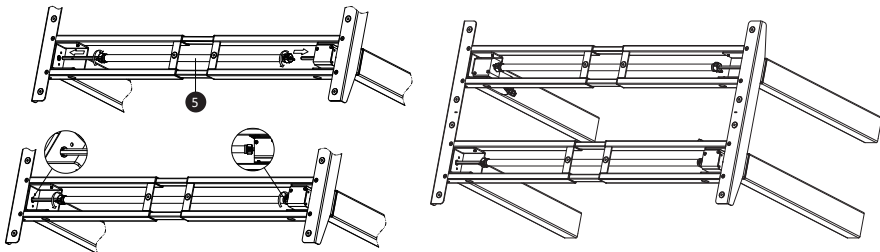

6.

Turn the entire frame upside down. Install the Feet(7) (each feet uses 4 M6X16 screws B), and install the Glide(F).

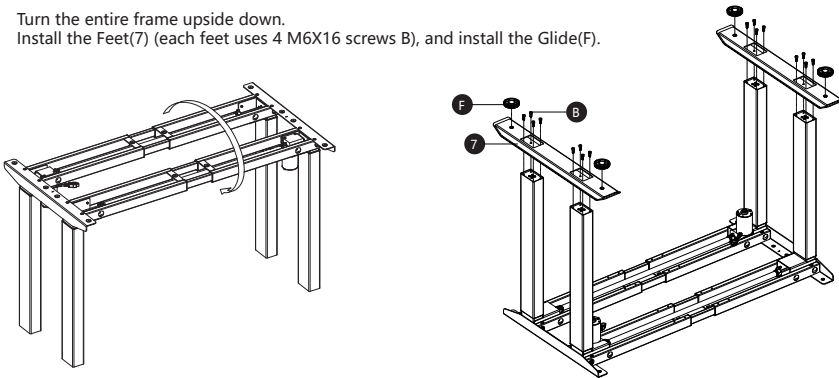


page 5

Assembly Instructions

7.


Put the Controller(8) into the Controller Holder(10).

Adjust the table frame to the required length, lift the entire table frame onto the table board.

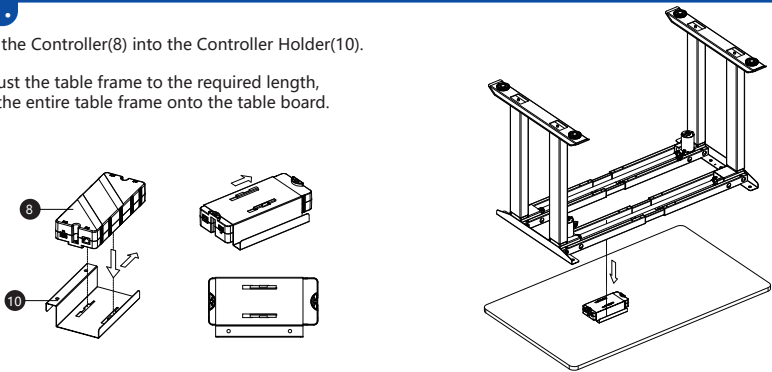


8.

As shown in the figure, install the Beam with sixteen M6X8 screws A. And install the table board with twelve M5X16 screws D.

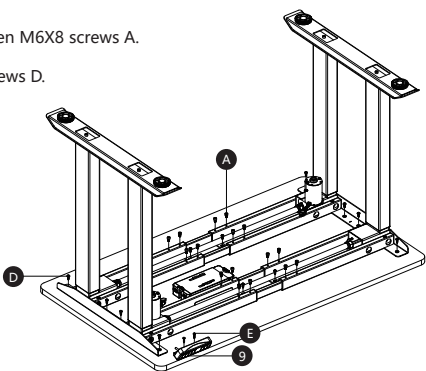

9.

Connect the controller, motor and handle.

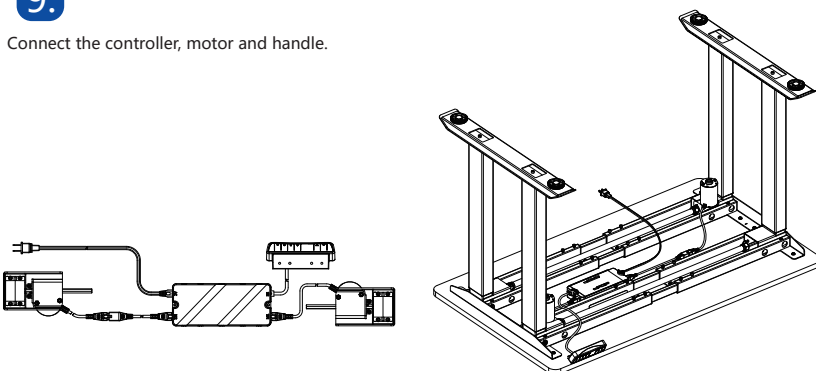

page 6

Assembly Instructions

10.

Turn the assembled desk right-side-up. With at least two people grab the Desk Base (not the desktop) and turn the desk right-side-up. Adjust the pre-installed Leveling Studs on the Feet.

11.

Plug the Power Cord(P11) into a 110V-240V outlet.



Make sure no obstacles are in the desk's path.
Make sure the desktop is not touching any walls.
Make sure all cords are appropriate length to accommodate the change in height.

Important: You must Reset the desk prior to use.

Reset Procedure: Press and hold the DOWN button on the Switch until the desk reaches its lowest height. Release the DOWN button. Press and hold the DOWN button again until the LED display reads "rES" . Release the DOWN button. Press and hold the DOWN button again until the desk lowers a little bit more, slightly rises and stops. Release the DOWN button. Your desk is now ready to use.

To program up to three presets: Use the up/down buttons to find a desired height, then press "S" followed by a number 1--3.

Conversion of metric and English units:

Press the "S" for 3 seconds until the display shows "S--" .
Press the "S" again.
When the screen flashes, press the "S" again.
After that, you can press the "down" key continuously to select S1(metric) or 1n(English) displayed on the screen.
And then press "S" .

Caution: Once a preset button is pushed, the desk will move to the programmed height(see caution box above).

12. Troubleshooting

If your desk is not functioning properly it may need to be reset. Unplug the power cord for 20 seconds. Plug the power cord back in and follow the RESET procedure outlined in Step 11.

If LED readout displays "rES" (reset), perform the reset procedure outlined in Step 11.

If the LED readout displays an error message ("E01" -- "E60") confirm that all wired connections are secure(legs to cables, cables to control box). Then perform the reset procedure outlined in Step 11.

If the error message persists after the reset procedure, contact your seller.

If the height between the legs exceeds 1.5 inches, stop the reset procedure&contact your seller.

If the handset displays "HOT" , let the base cool down for 18 minutes.

page 7