

Liftor **Vital**

Assembly Instructions


List of Required Parts and Components:



A.
Armrests



B.
Backrest

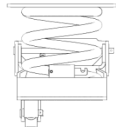

C.
Spring




D.
Headrest




E.
Cross Base



F.
Wheels 5 pcs

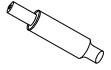

G.
Piston

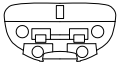

H.
Headrest
Mounting
Assembly



I.
Allen Key



J.
Screw
6*12 mm



K.
Screw
8*33 mm
2 pcs




L.
Cotter Pin
1,5*35 mm
3 pcs



M.
Dowel
8*30 mm
1 piece




N.
Dowel
8*35 mm
1 piece



O.
Dowel 8*155 mm
1 piece


Assembly Steps:

Step 1: Assembling the Chair Base

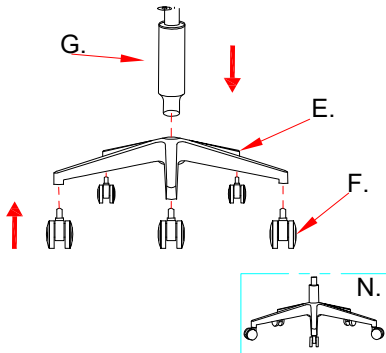


Place the cross base (E) on the floor with the holes for the wheels facing downward. Insert one wheel (F) into each leg of the cross base. Press all wheels firmly until they click into place. Insert the piston (G) into the central hole of the cross base (E), with the narrower end pointing downward.

Step 2: Attaching the Backrest and Headrest

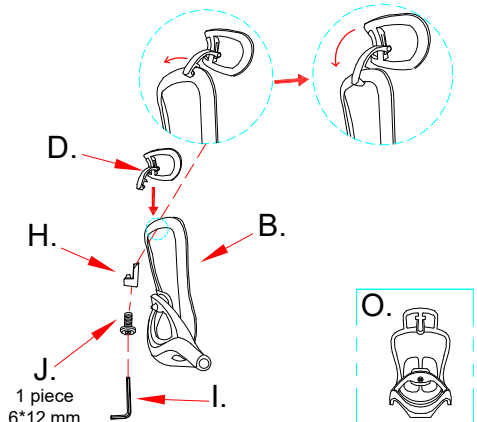


Attach the headrest (D) to the center of the backrest (B). Place part (H) underneath and secure it with a screw (J - 6*12 mm). Attach the backrest (B) using one screw (J). Tighten all screws with the Allen key (I). Insert the headrest (D) into the top hole of the backrest (B), following the direction indicated by the arrows in the diagram – the headrest must be inserted from top to bottom. Check that the headrest is properly seated and does not wobble.

Step 3: Attaching the Armrests

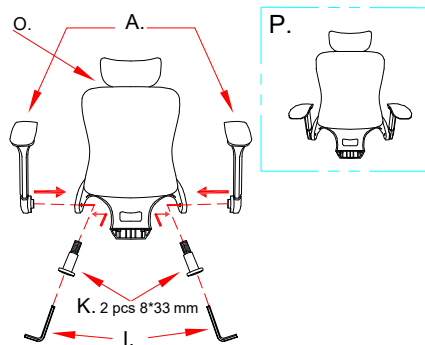


Attach the armrests (A) to the sides of the lower part of the seat, making sure that the mounting holes in the armrests align with the holes in the chair frame. Secure each armrest with two screws (K – 8 × 33 mm). Insert the screws from the bottom up and tighten them with the Allen key (I). After tightening, check that both armrests are securely attached.

Step 4: Attaching the Seat to the Backrest

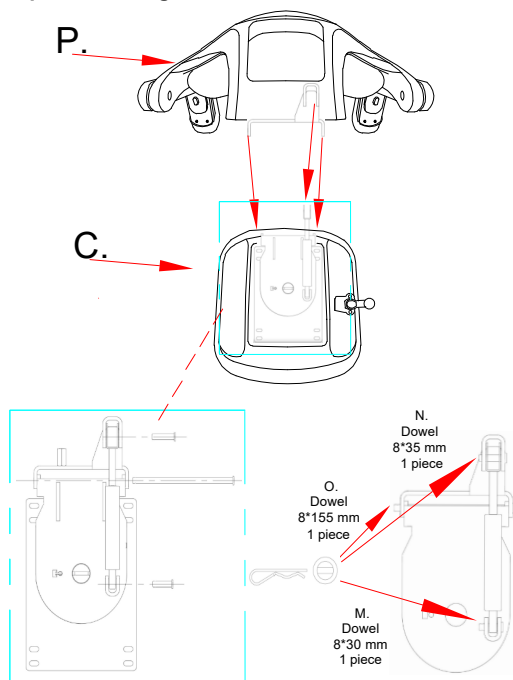

Place part C onto the assembled section P and secure it using the dowels, following the direction indicated by the arrows in the diagram. Make sure to use the correct type of dowels (see diagram). After inserting the dowels, secure them with cotter pins.

Step 5: Final Assembly of the Chair

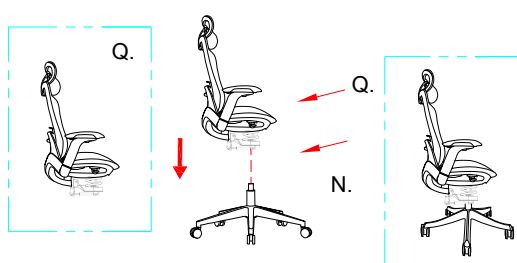

After completing Steps 1–4, slide part Q onto part N.

Waste Disposal



This symbol indicates that the product should not be disposed of with regular household waste. To prevent potential harm to the environment or human health from uncontrolled waste disposal, please recycle it responsibly and support the sustainable reuse of material resources. To return the used device, use available take-back or collection systems, or contact the retailer where you purchased the product. They can accept the product for environmentally safe recycling.

Importer:
Liftor s.r.o.
Pod Vinicemi 931/2, 301 00 Plzeň
www.liftor.cz